



HOBOWare Lite Software - supplied on CD

Product Images



Short Description

This software is also available as a free download: [Click Here](#)

Entry-level software for HOBO USB loggers, offering easy logger launch, readout, and data plotting.

Note: A USB Cable is required to connect your logger to your computer - you can add this to your order below.

Description

HOBOWare Lite does not support any of Onset's data assistants or data shuttles.

Launching a logger is easy with HOBOWare Lite software.

Launch parameters include:

- Which channels to record
- Logging interval (1 second to over 18 hours)
- Immediate start, delayed start, start at interval, or triggered (push-button or coupler) start
- Set up linear scaling to user-defined units for 0- 2.5V or 4- 20mA inputs (U-series loggers only)
- Battery level indication
- Synchronizes logger's clock to computer's clock

Check Logger Status:

- Verify logger set-up before launch
- Verify logger operation while logging
- Display real-time sensor readings
- Display memory used and battery voltage

| HOBOWare features comparison | | |
|------------------------------|---|-------------------------|
| | HOBOWare | HOBOWare Pro |
| Explanation | Support for all HOBO data loggers * | |
| | Quickly generate presentation-quality graphs | |
| | Copy & paste series | |
| | Merge data files | |
| | Save modified graphs as projects | |
| | Easy data export to XLS, CSV & TXT files | |
| | Linear & pulse scaling data assistants | |
| | Multi-Language Support (English/Spanish/French/German/Portuguese/Japanese/Simplified Chinese/Traditional Chinese/Korean) | |
| | Time-saving tools for fast setup, readout & export | |
| | Data Assistants for Dissolved Oxygen, Conductivity, Water Level, Growing Degree Days, Grains per Pound & kWh | |
| | Ability to create Pie Charts | |
| | Crop a series to a specific time frame | |
| | Subset Statistics Tool for details within a time frame | |
| | <u>21 CFR Part 11 Compliance</u> | |
| | Data Shuttle support | |
| | HOBOnode Manager to support ZW Data Nodes | |
| | Free Download | Buy Now |
| | *CX, MX, and other BLE loggers require iOS or Android mobile devices and HOBOnode Manager or InTemp software, available free from the Android or Apple app stores. Certain loggers (U20s, U24's, U26's) require data assistants (only available in HOBOWare Pro) to provide the most accurate data. | |
| Brand | Onset HOBO | |

Additional Options

| | |
|--|---|
| HOBOWare Pro Software Options | HOBOWare Pro on USB Drive (USB cable included) |
| | HOBOWare Pro on CD (USB Cable Included) |
| | HOBOWare Pro - Download Only (USB cable NOT included) |
| USB Cable (included with HOBOWare Pro on USB Drive & CD) | HOBO U-Series to PC USB Cable |